



SINGER® MODEL 7462

*Simplicity does it.*



SINGER® MODEL 7462

▶ 28 Stitch programs  
2 Buttonholes

Feature Highlights:



Fast stitch selection buttons



Six-point feed system



One-step buttonhole



Top drop-in bobbin system



Automatic needle threader



13 Needle positions



The new SINGER® 7462 offers a vast array of stitch programs with **fast selection buttons**, letting you cope with every modern fabric type. At the touch of a button it automatically ties off at the beginning and end of a seam, lets you thread the needle at the flick of your finger with the **automatic needle threader**, and sews precise seams thanks to a **six-point feed system** for guaranteed optimal results. **Stitch width and length can infinitely be adjusted with clever slides**, even while sewing!



PERFECT BUTTONHOLES SEWN IN NO TIME:  
AFTER INSERTING THE BUTTON IN THE BUTTONHOLE  
FOOT'S GUIDE, THE SINGER® 7462 WILL AUTOMATICALLY  
SEW A MATCHING BUTTONHOLE.

**SINGER®**



All stitch programs  
at a glance:




► MODEL 7462



**Top drop-in bobbin system**

Bobbin insertion from the top means unbeatable convenience, making bobbin changing and cleaning completely hassle-free.

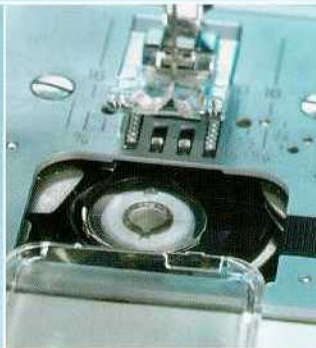

**Zipper insertion, button-hole sewing, or just machine cleaning?**

It's all extremely easy with the machine's extensive range of accessories.



**Automatic needle threader**

No need to look for the needle's eye! Simply place the thread into the automatic needle threader and pull it through – within seconds the needle is ready to start.



# SINGER®

SINGER® is a registered trademark of The Singer Company Limited or its affiliates;  
© 2005 The Singer Company Limited